PDV7007/PDV7008

USER MANUAL

DVD-MPEG4-CD-MP3-PLAYER

Please read this User Manual carefully to ensure proper use of this product and keep this manual for future reference.

Content

Important Safety Instructions 1
Panel Illustration.....2
Connecting to the USB.....2
Remote Control..... 3
Connecting to a TV set.....4
MP3/WMA/MPEG4 playing.....4
PICTURE CD PLAYBACK 5
SYSTEM SETUP.....6
Trouble-shooting.....7
Specifications.....8
Other.....8

Important Safety Instructions

* ***Warning:*** To reducethe risk of electricshock, do not removethe cover or back. There are no user-serviceable parts inside. Refer servicing to qualifiedpersonnel.
* ***Warning:*** To preventfire or electric shockhazard, do not exposethe unit to rain or moisture.
* Do not expose theAdaptor and Digital PhotoFrame to water (drippingor splashing) and no objectsfilled with liquids, suchas vases, should beplaced on the unit.
* Keep the product awayfrom direct sunlight andheat source such asradiators or stoves.
* Do not block theventilation openings. Slots andopenings on the unitare provided for ventilation. The openingsshould never be blockedby placing your productson a cushion, sofa orother similar surface.
* Do not place theproduct on unstable cart, stand,tripod, bracket or table. The unit may fall,resulting in possible damageor injury.
* Never place heavy orsharp objects on theLCD panel or frame.
* Only use the ACadapter included with product.Using any other adapterwill void your warranty.
* Unplug the power fromthe outlet when theunit is not inuse.
* Attention should be drawnto the environmental aspectsof battery disposal.
* WARNNING: The battery (battery orbatteries or battery pack) shallnot be exposed to excessive heatsuch as sunshine, fireor the like.
* WARNNING: Excessive sound pressurefrom earphones or headphonescan cause hearing loss.
* ARNNING: Only use attachments/accessoriesspecified provided by the manufacturer, theproduct is supplied byAC adapter,the AC adapter isused as disconnect device, the disconnectdevice shall remain readilyoperable.

Caution: Danger of explosionif battery is incorrectly replaced,replaced only with the same or equivalenttype (Lithium battery).

Panel Illustration

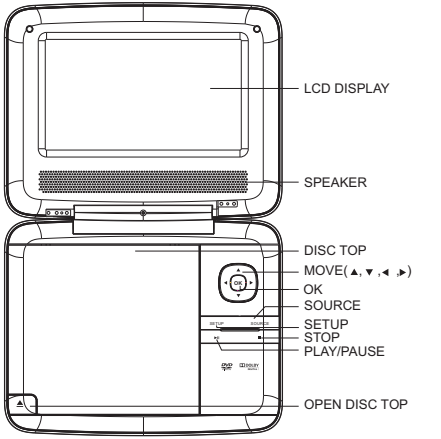

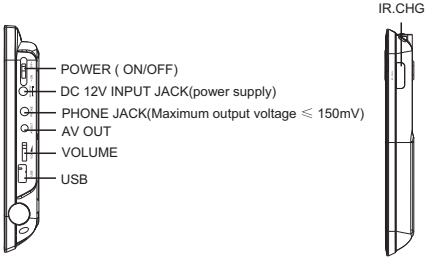

Connect to the USB

Press the SOURCE key on the remote control until you switched into USB work mode.



USB interface

This unit have a USB IN jack to play the MP3 music or and JPEG files or other files. Press the <SOURCE> button to choose USB IN mode. All the function is the same to play a disc.
Note: the USB IN port is compatible with flash memories, it is not warranted the compatibility with MP3 players using owner software.

NOTE:
When using USB function. Please do not insert in the wrong direction, or it will be corrupted.

Remote Control

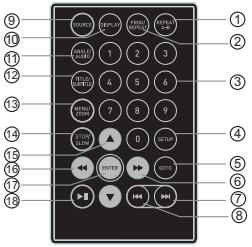

1. ***Repeat A-B:*** Press 1x: set A ,prss 2x: set B press 3x: disable the function.
2. ***Prog/Repeat:*** Short press: Repeat mode Long press (2Sec.): DVD program mode.
3. ***0-9 Number Keys***
4. ***Setup:*** Open the setup menu.
5. ***Goto:*** Goto a specific time index.
6. ***Fast Forward:***
7. ***Next:*** Next chapter or file.
8. ***Previous:*** Previous chapter or file.
9. ***SOURCE:*** Input mode selection.
10. ***Display:*** Display detailed informations of the current file or disc.
11. ***Angle / Audio:*** Short press: Changes the audio mode (if different modes are available) Long press (2Sec.):Changes the angle mark (if different modes are available)
12. ***Title / Subtitle:*** Short press: Change subtitle mode (if subtitles are available) Long press (2Sec.): DVD Title menu.
13. ***MENU / ZOOM:*** Short press: Zoom in Long press (2Sec.): Menu key for DVD Menu.
14. ***STOP / SLOW:*** Short press: Stop Long press (2Sec.): Slow motion.
15. ***Direction keys (▲▼◄►):***
16. ***Fast Rewind:***
17. ***ENTER:*** To confirm and enter options or to play files.
18. ***Play / Pause***

Preparation of the Remote Control
Place the remote control on an even surface and insert the supplied button cell into the remote control as follows.

1. Push the button towards left.
2. Pull the battery loader out.
3. Insert the battery into the receptacle make sure the polarity matches the marks inside the component.
4. Insert the receptacle into the remote control.

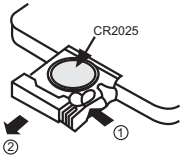

Cell data
Battery type: 1x CR2025 , 3 V
Service life: approximately 1 year (for normal use and room temperature).

Using Of Remote Control
Point the remote control towards the main unit when operating.
The remote control works best at a distance less than 5 m and at an angle of up to 30° to the front of the unit. No obstacles may stand in the way between remote control and infrared sensor and do not place the remote control in direct sunlight. If the remote control unit fails to work even when it is operated near the player, replace the battery.

Notes on batteries
If the remote control is not used for a long period of time, please remove the battery from the compartment.
Do not heat batteries or dispose of them in fires.
Do not dismantle, deform or modify batteries.

Connecting to a TV set

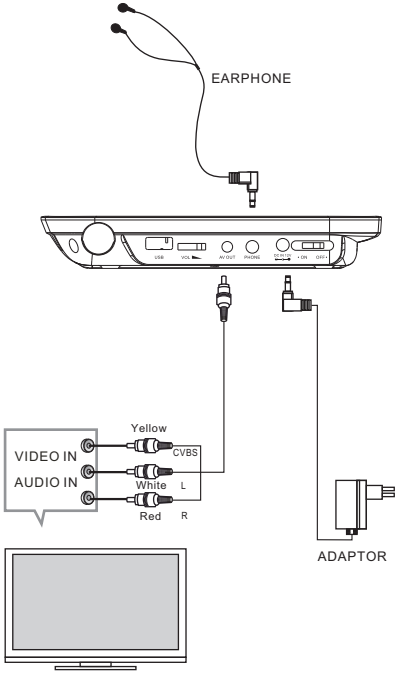

MP3/WMA/MPEG4 PLAYING

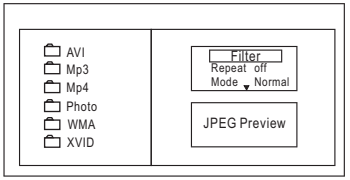

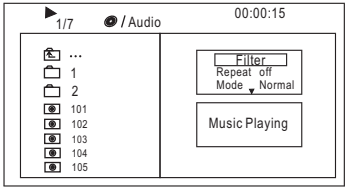

The MP3/WMA/MPEG4 disc has such a directory structure as shown picture above.
Press ***Direction key*** to choose the root directory and then press ENTER button to enter into the sub directory.
Press ***Direction key*** to choose the desired track and then press ***ENTER*** or ***PLAY*** to enjoy the music or movie.
If you want to return to the upper menu, press ***Direction key*** to choose the icon and press ***ENTER*** button.
Filter: Allows selecting the categories of files displayed in the browser list.
This selection is done among the 3 categories: Audio, Photo and Video.
Repeat: To switch different repeat playing mode.
Mode: Select different playing mode.

Normal: Shuffle mode is cancelled.

*Shuffle: Shuffle mode enabled. When playback reaches the end of the current chapter/track, playback jumps to a random chapter/track. As the end of each chapter/track is reached, another random chapter/track will be played until all tracks/chapters have been played or the Shuffle mode is cancelled by toggling to a different **Mode** Option.*

Music Intro: In this mode, the media will play 10 seconds then skip to next media

*Edit Mode: To enable programmed playback mode. When you select the mode, press LEFT **Direction key** to directory and press ENTER to choose the desired track and press **Add to program** to add in programmed playback.*

Program view: Display program track.

Brower view: Display track directory.

*Add to program: Choice the track press **Add to program** to add the track of the program play directory.*

*Clear program: In the complete stop state (press the **STOP** button twice), choose the track press **Clear program** to delete the track of the program play directory.*

PICTURE CD PLAYBACK

The PICTURE CD dis has such a directory structure structure as shown in the following picture.

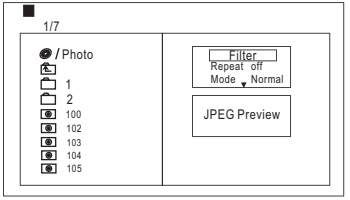

Press ***Direction key*** to choose the root directory and then press ENTER button to enter into the sub directory.

Press ***Direction key*** to choose the desired picture and then press ***ENTER*** or ***PLAY*** to enjoy the picture.

If you want to return to the upper menu, press ***Direction key*** to choose the icon and press ***ENTER*** button.

Image rotation

In picture play state, press ***Direction key*** to rotation the picture, press ANGLE button to change the picture scan mode.

SYSTEM SETUP

MENU OPERATION

Press the ***SETUP*** button on the remote control, the SETUP MENU(main) will be displayed. After accessing the setup menu, press the direction buttons for up and down movement to select an item desired, then press the ***ENTER*** button to confirm.
Press ***LEFT*** direction button return to the menu of upper level.
To exit the setup, press the ***SETUP*** button again. In the SETUP MENU, you may choose any of the following options as you like.

LANGUAGE SETUP

Select ***Language*** in the setup menu, and display the ***Language*** submenu:

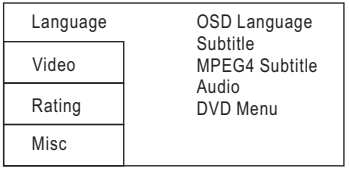

OSD Language

Use this item to select the language of the setup menu and screen display.

Subtitle

This option provides the preset subtitle language.
Follow the operating instructions stated in DVD MENU SETUP In combination with the desired option.

MPEG4 Subtitle

Choice different MPEG4 subtitle encoding option.

Audio

Follow the operating instructions stated in ***DVD MENU SETUP*** In combination with the desired option.
This option provides the built-in disc dubbing language options.

DVD Menu

This option provides the film s menu language options.
Follow the operating instructions stated in ***DVD MENU SETUP***
In combination with the desired option.

VIDEO SETUP

Select ***Video*** in the setup menu, and display the ***Video*** submenu:

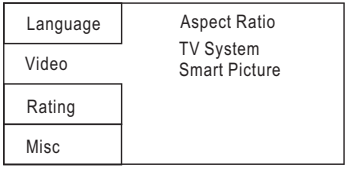

Aspect Ratio

The image display ratio is related to the recorded disc format. Some disc can not display images in the aspect ratio you choose.
If you play a disc recorded in 4:3 format on a widescreen TV, black bars will appear on the left and right side of the screen. You must adjust the screen setting depending on the type of the television you have.

TV System

This product supports output of various system, including ***NTSC, PAL.***
If your TV set has only ***NTSC*** or ***PAL*** system, the screen will blink and become colorless when a wrong system is selected.
Note: *For more information of output format, refer to the instructions or your TV set.*

Smart picture

Adjust display effect for video output: Standard: default effect.
Bright: internal setting for bright view effect.
Soft: internal setting for soft view effect.
Dynamic: user adjust brightness, contrast, color etc.

RATING SETUP
Select ***Rating*** in the setup menu, and display the Rating submenu:
Note: *Not all DVD support ratings.*

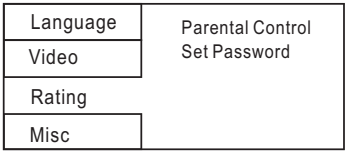

Parental Control
Selecting a Rating allows the user to set the parental control feature of the player
Select ***Parental Control***, and press ***ENTER*** to change the different mode.
Note: *Unlock the password before setting* ***Parental Control.***

Set Password
Use the 0-9 keys to input four digits (password), then press ***ENTER*** to confirm.
Note: *If you forget your password, please use the universal password 6666 to unlock.*

MISC SETUP
Select ***MISC*** in the setup menu, and display the submenu:
* Use Default Settings Reset setup data to factory default and re-load disc.

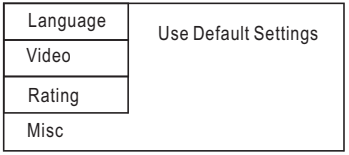

Trouble-shooting

Carry out the problem-solving measures described in the following section before contacting Customer Support.
Turn off the DVD player immediately as soon as you suspect a malfunction.
Unplug the power plug and check whether the DVD player is unusually warm or whether smoke is rising from it.

Problem	Possible cause	Remedy
The DVD player does not work	Disc cover not closed	Close disc cover
	No disc inserted	Insert disc
	Disc inserted the wrong way	Insert disc with label facing up
	Disc dirty or deformed	Clean disc, or insert other disc
	Regional code of the player does not match the regional code of the DVD	Purchase DVD with corresponding regional code
	Moisture on lens	Remove disc and turn off DVD player for at least two hours
No audio	Device not properly connected	Check connexions and connect device in the correct way
	Headphones connected (loudspeaker off)	Pull out the headphones
	DVD sound settings incorrect	Check sound settings and set sound correctly
	Disc dirty or deformed	Clean disc, or insert other disc
No video	TV screen is off or in the incorrect video mode	Turn on LCD screen and/or set correct video mode
	Device not properly connected	Check connexions and connect device in the correct way
Poor video and/or audio quality	Disc dirty or deformed	Clean disc, or insert other disc
Repeated playback of a section	Loop mode is switched on	Exit the loop mode
	Disc dirty or deformed	Clean disc, or insert other disc
Remote control does not work	Obstacle between remote control and DVD player	Remove obstacle
	Remote control not pointed at DVD player	Point remote control directly at DVD player
	Remote control battery inserted the wrong way	Check the battery's polarity and, if necessary, insert battery correctly
	Battery too low or completely discharged	Insert new battery

Specifications

Play mode	NTSC/PAL
Disc mode	DVD,VCD, CD, MP3, CD-R, CD-RW, JPEG, DVD+ -R/W, MPEG4,
Video S/N ratio	⩾65dB.
Resolution	⩾500 lines.
Frequency response	fs 96KHz: 20Hz-20KHz:+/-1dBl
Audio S/N ratio	⩾90dB
Dynamic range	⩾80dB
Distortion	< 0.01%
D/A Converter	96KHz/24bit
Display Device	Color TFT-LCD
Screen Size	7 inches
Video output	1Vp-p(75)
Audio output	2CH
Power Voltage	DC IN 12V
Power consumption	⩽12W

Specifications are subject to change without notice.

Other possible causes forproblems:
Static discharges or otherexternal interferences can cause theDVD player to malfunction. When this happens,disconnect the power plugfrom the mains socket and plug it backin.
If the problem persists,disconnect the device fromthe mains again andcontact Customer Service or a repairshop.

Other

This is to certify that the portable DVD palyer is conformity with council directive 2004/108/EC(EMC Directive)

Applicable standards:
EN55013:2001+A1+A2
EN61000-3-2:2006
EN61000-3-2:2008
EN55020:2007

For more information please visit our website
www.mpmaneurope.com